




Pozidrive Raised Countersunk Chipboard Screws

General purpose wood screws with a pozidrive raised countersunk head. Raised countersunks tend to be used where the screw head is going to be seen, as it gives a more attractive look than the flat countersunk and a softer edge. A countersunk head is typically used in conjunction with a countersunk hole providing a flush, snag free fit. Please note, these screws can sometimes come with a partially threaded shank.

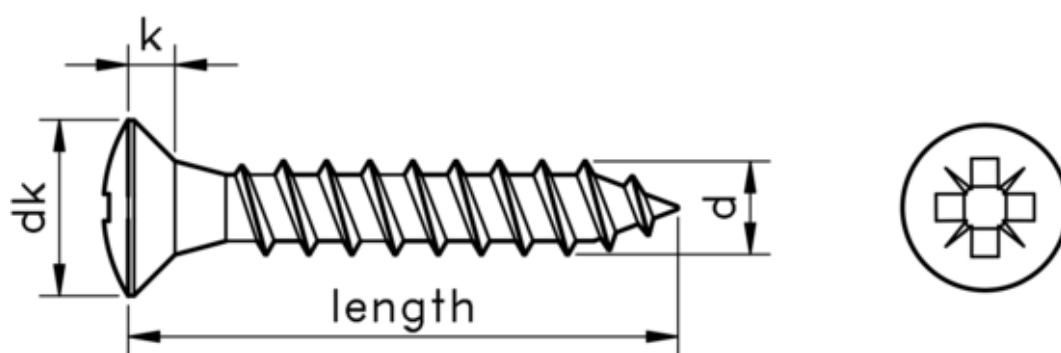

d	dk	k	drive
3	5.8	1.65	PZ 1
3.5	6.7	1.93	PZ 2
4	7.7	2.20	PZ 2
4.5	8.5	2.35	PZ 2
5	9.5	2.50	PZ 2
6	11.5	3.00	PZ 3