




## Coach Screws

Coach screws, also known as lag bolts or lag screws, are a heavy duty wood screw with a hexagonal head. They are usually employed in joining timbers or attaching metalwork to timber. Available in a broad range of sizes and materials for use in projects of varying scale and environments.

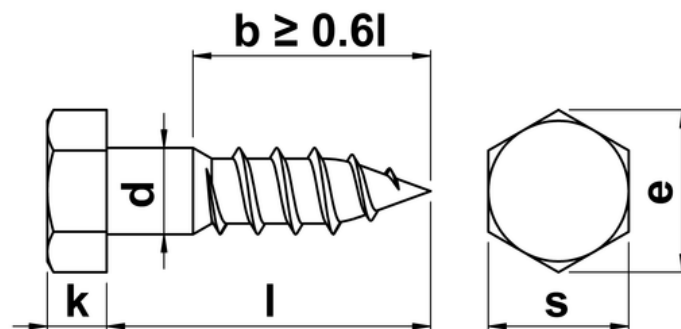

d	k	s	e min.
5	3.5	8	8.63
6	4.0	10	10.89
7	5.0	12	13.07
8	5.5	13	14.20
10	7.0	17	18.72
12	8.0	19	20.88
16	10.0	24	26.17