




## Pozidrive Raised Countersunk Chipboard Screws

General purpose wood screws with a pozidrive raised countersunk head. Raised countersunks tend to be used where the screw head is going to be seen, as it gives a more attractive look than the flat countersunk and a softer edge. A countersunk head is typically used in conjunction with a countersunk hole providing a flush, snag free fit. Please note, these screws can sometimes come with a partially threaded shank.

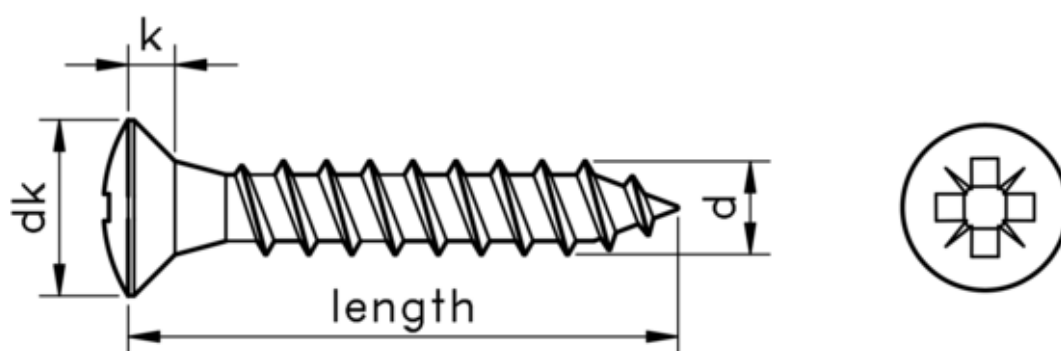

d	dk	k	drive
3	5.5-6.0	1.6-1.9	PZ 1
3.5	6.4-7.0	1.8-2.1	PZ 2
4	7.4-8.0	2.1-2.5	PZ 2
4.5	8.2-9.0	2.3-2.7	PZ 2
5	9.2-10.0	2.6-3.0	PZ 2
6	10.9-12.0	3.1-3.6	PZ 3